



Relaxed V-Neck Tee

A slouchy everyday tee with a clean mitered V-neckband and gentle curved hem

Garment Type: Knit Tee | Difficulty: Confident Beginner | Provenance: Threadline Open Design Studio | License: CC BY-SA 4.0

PRINTER CALIBRATION & SCALE VERIFICATION

Measure both test squares with a rigid ruler before cutting fabric. Print at 100% scale without shrinking.

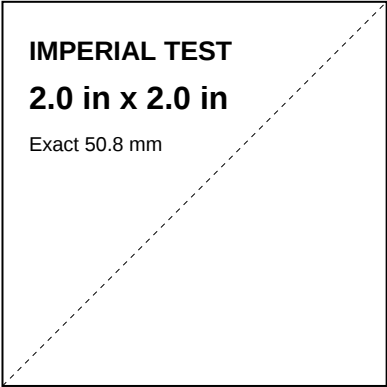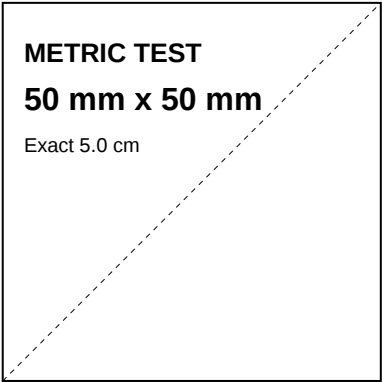

- Scale Rules:
1. Open in Acrobat Reader
 2. Select Actual Size 100%
 3. Do NOT Fit to Page
 4. Verify dimensions above

SIZE SELECTION & EASE RECOMMENDATIONS

Provides 8 cm 3.1" of comfortable positive bust ease. Size down for a body-conscious fit.

Relaxed positive ease of +8 cm +3.1" across the chest for everyday slouchy comfort.

STANDARD BODY MEASUREMENTS CHART

Size Range	XS	S	M	L	XL	2XL	3XL
Full Bust/Chest	80 cm	86 cm	94 cm	102 cm	112 cm	122 cm	132 cm
Full Hip / Seat	88 cm	94 cm	102 cm	110 cm	120 cm	130 cm	142 cm

FINISHED MEASUREMENTS & MATERIALS

FINISHED GARMENT MEASUREMENTS (INCLUDES DESIGN EASE)

Dimension	XS	S	M	L	XL	2XL	3XL
Finished Chest	88 cm	94 cm	102 cm	110 cm	120 cm	130 cm	140 cm
Hem Sweep	92 cm	98 cm	106 cm	114 cm	124 cm	134 cm	144 cm
Garment Length	60 cm	61.5 cm	63 cm	64.5 cm	66 cm	67.5 cm	69 cm

FABRIC REQUIREMENTS (45 IN / 115 CM & 60 IN / 150 CM BOLTS)

Bolt Width	XS	S	M	L	XL	2XL	3XL
45" / 115 cm Fabric	1.5 yd	1.5 yd	1.5 yd	1.8 yd	1.8 yd	2.1 yd	2.1 yd
60" / 150 cm Fabric	1.2 yd	1.2 yd	1.2 yd	1.4 yd	1.4 yd	1.6 yd	1.6 yd

RECOMMENDED FABRICS & STRETCH PROPERTIES

Recommended Substrates: Cotton-modal or bamboo jersey 170 200 gsm for liquid drape, 100% Slub cotton jersey for casual textured look, Viscose elastane jersey for fluid movement, Linen jersey for breathable summer knitwear. Stretch Requirement: 30% crosswise stretch with good recovery.

NOTIONS & SEWING TOOLS CHECKLIST

- ☐ Stretch ballpoint or jersey machine needle size 75/11 or 80/12
- ☐ Polyester thread
- ☐ Optional twin-needle for hem
- ☐ Sharp fabric shears
- ☐ Measuring tape
- ☐ Iron and pressing ham

PATTERN INVENTORY & CUTTING LAYOUT

STANDARD SEAM & HEM ALLOWANCES

Use the seam and hem allowances printed on each pattern piece. Verify every allowance label before cutting fabric.

PATTERN PIECE INVENTORY & CUTTING SCHEDULE

Piece Name	Cut Quantity	Material / Interfacing
Front Bodice with V-Neck	Cut 1 on fold	Main Fabric
Back Bodice on Fold	Cut 1 on fold	Main Fabric
Short Sleeve	Cut 1 pair	Main Fabric
Mitered V-Neckband	Cut 1	Main Fabric

FABRIC PREPARATION & CUTTING RULES

- Lay pattern pieces parallel to stretch grainline.
- Cut neckband across greatest stretch.

MULTI-PAGE TILE ASSEMBLY INSTRUCTIONS

1. Check Sheet 1 calibration square before printing the remaining pattern sheets.
2. Trim right and bottom border lines along the dashed perimeter frame.
3. Match corner crosshairs, such as A1 to A2 and B1 to B2, without overlapping.
4. Tape sheets securely on both sides before cutting paper pieces.

STEP-BY-STEP SEWING INSTRUCTIONS

Step 1: Shoulder Seams with Clear Elastic

Align Front Bodice and Back Bodice on Fold right sides together. Stitch shoulder seams right sides together, incorporating clear elastic into the seam to prevent sagging. Press seam allowances toward back.

Step 2: Prepare Mitered V-Neckband Loop

Join neckband short ends into a continuous loop. Fold neckband right sides together and stitch center front at a 45-degree angle to create the V miter. Press seam allowances open.

Step 3: Attach V-Neckband

Pin mitered point to center front V. Stretch neckband evenly around neckline and stitch with stretch stitch. Press down.

Step 4: Set Sleeves & Side Seams

Insert sleeves flat into armholes right sides together. Stitch side seams in one continuous line right sides together, and press seam allowances.

Step 5: Twin-Needle Hemming

Turn under 2 cm hem on sleeves and bottom curve. Topstitch with twin needle or narrow zigzag.

TROUBLESHOOTING & PRO SEWING TIPS

Issue: Puckering at the V-neck tip

Fix: Clip front bodice V point precisely 1 mm before needle line so seam lays completely flat.