



# Wrap Front Peplum Top

Wrap Front Peplum Top    Verified open pattern specification

Garment Type: Peplum Top | Difficulty: Confident Beginner | Provenance: Threadline Open Design Studio | License: CC BY-SA 4.0

## PRINTER CALIBRATION & SCALE VERIFICATION

Measure both test squares with a rigid ruler before cutting fabric. Print at 100% scale without shrinking.

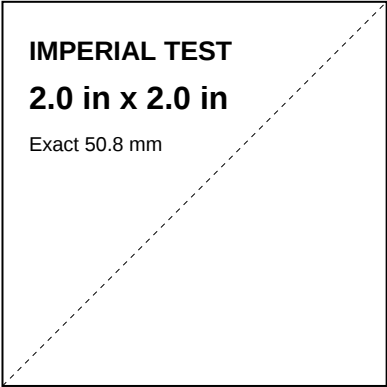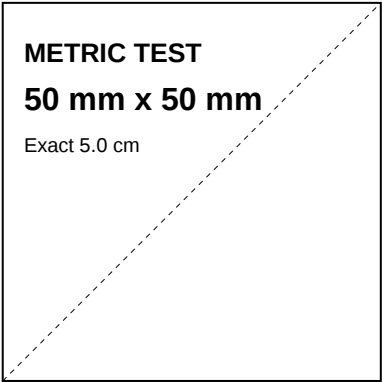

- Scale Rules:
- 1. Open in Acrobat Reader
  - 2. Select Actual Size 100%
  - 3. Do NOT Fit to Page
  - 4. Verify dimensions above

## SIZE SELECTION & EASE RECOMMENDATIONS

Select size based on full bust/chest measurement.  
+4 to +8 cm positive wearing ease for comfortable drape.

## STANDARD BODY MEASUREMENTS CHART

| Size Range      | XS    | S     | M      | L      | XL     | 2XL    | 3XL    |
|-----------------|-------|-------|--------|--------|--------|--------|--------|
| Full Bust/Chest | 80 cm | 86 cm | 92 cm  | 98 cm  | 108 cm | 118 cm | 128 cm |
| Full Hip / Seat | 88 cm | 94 cm | 100 cm | 106 cm | 116 cm | 126 cm | 136 cm |

## FINISHED MEASUREMENTS & MATERIALS

### FINISHED GARMENT MEASUREMENTS (INCLUDES DESIGN EASE)

| Dimension      | XS     | S      | M      | L      | XL     | 2XL    | 3XL    |
|----------------|--------|--------|--------|--------|--------|--------|--------|
| Finished Chest | 86 cm  | 92 cm  | 98 cm  | 104 cm | 114 cm | 124 cm | 134 cm |
| Hem Sweep      | 124 cm | 130 cm | 136 cm | 142 cm | 154 cm | 166 cm | 178 cm |
| Garment Length | 56 cm  | 58 cm  | 60 cm  | 62 cm  | 64 cm  | 66 cm  | 68 cm  |

### FABRIC REQUIREMENTS (45 IN / 115 CM & 60 IN / 150 CM BOLTS)

| Bolt Width          | XS      | S       | M       | L       | XL      | 2XL    | 3XL    |
|---------------------|---------|---------|---------|---------|---------|--------|--------|
| 45" / 115 cm Fabric | 1.85 yd | 1.85 yd | 1.85 yd | 2.2 yd  | 2.2 yd  | 2.6 yd | 2.6 yd |
| 60" / 150 cm Fabric | 1.55 yd | 1.55 yd | 1.55 yd | 1.85 yd | 1.85 yd | 2.2 yd | 2.2 yd |

### RECOMMENDED FABRICS & STRETCH PROPERTIES

Recommended Substrates: Lightweight to medium-weight suitable fabric substrates, Pre-washed natural fibers cotton, linen, or bamboo. Stretch Requirement: None 0% stable woven.

### NOTIONS & SEWING TOOLS CHECKLIST

- ☐ Matching all-purpose polyester or cotton sewing thread
- ☐ Universal sewing needle size 80/12
- ☐ Sharp fabric shears
- ☐ Measuring tape
- ☐ Iron and pressing ham

## PATTERN INVENTORY & CUTTING LAYOUT

### STANDARD SEAM & HEM ALLOWANCES

Use the seam and hem allowances printed on each pattern piece. Verify every allowance label before cutting fabric.

### PATTERN PIECE INVENTORY & CUTTING SCHEDULE

| Piece Name             | Cut Quantity  | Material / Interfacing |
|------------------------|---------------|------------------------|
| Specialty Front Bodice | Cut 1 Pair    | Main Fabric            |
| Back Bodice            | Cut 1 on Fold | Main Fabric            |
| Sleeve                 | Cut 1 Pair    | Main Fabric            |

### FABRIC PREPARATION & CUTTING RULES

- Press fabric before cutting to remove packing folds and pre-shrink fibers.
- Align piece grainlines strictly parallel to fabric selvages.
- Transfer notch markings with small 3 mm snips into the seam allowance margin.

### MULTI-PAGE TILE ASSEMBLY INSTRUCTIONS

1. Check Sheet 1 calibration square before printing the remaining pattern sheets.
2. Trim right and bottom border lines along the dashed perimeter frame.
3. Match corner crosshairs, such as A1 to A2 and B1 to B2, without overlapping.
4. Tape sheets securely on both sides before cutting paper pieces.

## STEP-BY-STEP SEWING INSTRUCTIONS

### Step 1: Cut Pieces

Cut surplice wrap front bodice panels, back bodice on fold, and set-in short sleeves.

### Step 2: Shoulders and Neckline

Join shoulder seams with right sides facing and finish wrap neckline edges with narrow double-fold hem.

### Step 3: Overlap Front Panels

Overlap front bodice panels at waistline matching center marks and baste across bottom edge.

### Step 4: Insert Sleeves

Insert sleeves into armholes and stitch side seams continuously from sleeve sleeve hems through waist.

### Step 5: Hemming and Pressing

Turn narrow double hem along bottom edge, hem sleeve sleeve hems, and give completed top a final steam press.

## TROUBLESHOOTING & PRO SEWING TIPS

### Issue: Seams puckering along stitch line

Fix: Insert fresh needle and test balance on fabric scrap.

### Issue: Wavy edge along curved perimeter

Fix: Staystitch immediately after cutting and use walking foot.